

# Tractors Singapore Limited

## LIST OF USED PARTS IN STOCK

No	Part No	Description	Qty
1	1P0009	CONN. ROD (USED)	5
2	1069872	PUMP GP	3
3	1134779	TURBO GP	1
4	118-3955	CYLINDER GP	2
5	1183921	CYLINDER GP	2
6	1183955	SEAL & CYL G	2
7	1183967	CYL.G & SEAL	2
8	1220500	PUMP GP-WATER	2
9	1232084	CYL G	2
10	1232091	CYL G.	2
11	1315453	CONTROL AS	3
12	1315455	CONTROL AS	3
13	1336865	CYLINDER G	2
14	1453216	USED CYL-HD GP	12
15	1518649	OIL PAN	4
16	1610797	CONTROL AS	1
17	1664378	PUMP GP-WATER	1
18	2W6078	PINION	1
19	2W6081	GEAR A	1
20	2071332	BELLOW AS	3
21	3E7577	ALTERNATOR	1
22	3N6996	BLOCK AS	1
23	3N7990	CORE A HT EX	2
24	3N7992	CORE A HT EX	1
25	3N8561	PUMP GP	4
26	3N9094	CORE A HT EX	1
27	3T2652	MOTOR G	1
28	4N3986	ALTERNATOR	1
29	4W1226	TURBOCHARGER G	1
30	5N8362	HOUSING	1
31	5N8363	COVER A	1
32	5N8364	HOUSING	1
33	5N8368	PINION	1
34	6N9294	ALTERNATOR	3
35	6T1395	ALTERNATOR G	2
36	6V0890	MOTOR G	2
37	6V5539	MOTOR G	2
38	7C9142	CHARGER	3
39	7L0138	RECON CYL. HEAD	13
40	7W0408	CHARGER	1
41	7W2243	HEAD A	1
42	9U7522	HD RPR TOOL	1
43	9X8236	SOLENOID	1

# Tractors Singapore Limited

## LIST OF USED PARTS IN STOCK D-399 (Prefix 35B as reference)

No.	Part No	Description	Qty
1	3N6067	Regulator Housing	1
2	6L2062	Front Housing	1
3	6L7955	Flywheel Housing Top Cover	1
4	3N1235	Water Line Housing	1
5	7N4514	Pistons	2
6	4H9810	Rocker Arms	16
7	4L3411	Gear	1
8	2N3279	Oil Lines	13
9	6L5486	Lifters	16
10	2N3263	Housing	1
11	6L8989	Side Cover	1
12	4L3384	Adapter	1
13	4L3412	Gear	1
14	3N8911	Air Manifold	1
15	4L6263	Pipe	1
16	6L8836	Exhaust Manifold	1
17	6L8835	Exhaust Manifold	1
18	4L6200	Inlet Manifold	2
19	3N6065	Regulator Housing	1
20	6L2787	Flywheel Housing	1
21	4L6235	Water Line Pipe	1
22	2N4288	Housing	1
23	2N3227	Lifter Housing	8
24	4L3854	Rocker Arms	16
25	4L3410	Gear	1
26	2N3356	Oil Line	1
27	2N4541	Oil Jet	14
28	8L4857	Side Covers	7
29	3N1360	Fuel Filter Housing	1
30	4L3413	Plate	1
31	4L3803	Rocker Arm Bracket	16
32	4L3378	Plates	5
33	6L8839	Exhaust Manifold	4
34	6L8838	Exhaust Manifold	2
35	6L8833	Exhaust Manifold	1
36	4L7820	Rod Assembly	30
37	6H3217	Shaft Assembly	8
38	4L3843	Piston Pin	15
39	1P9	Connecting Rod	4
40	1F4418	Cover	14
41	2N3598	Cover	8
42	1N5757	Flywheel Assembly	1

43	4L3364	Plate	1
44	4L3412	Gear Assembly	1
45	1H4725	Silencer	1
46	3N562	Damper	1
47	2N4518	Plate	1
48	3N845	Eye Assembly	1
49	6L8825	Support Assembly	1
50	8L5869	Eye Assembly	1
51	4L8116	Tube Assembly	1
52	6L3552	Gear	1
53	6L9395	Oil Sump Assembly	1
54	6L8870	Water Shield Assembly	2